

Enterprise Remote - Backwards Compatibility Chart

This chart explains what function each of the Enterprise remote buttons will execute when operating a compatible projector. In the chart below, the 3DLP® column pertains to all Enterprise projectors unless otherwise specified.

Button	Function	3DLP®	1DLP®	M Series (V2.5.0)	M (V2.4.1) J (V1.1.2)	Pre M/J
ON	Power On	○	○	○	○*	○*
OFF	Power Off	○	○	○	○*	○*
SHUTTER OPEN	Open Shutter	○	○*	○	○*	○*
SHUTTER CLOSE	Close Shutter	○	○*	○	○*	○*
AUTO SIGNAL	Auto-setup Analog Signal	○ Digital Only	○	○	○	○
ASPECT RATIO	Aspect Ratio	○	—	○	—	—
☀	Gamma	—	○	○	○	○
INPUT SELECT	Input Select	○	—	○	○	Input 5
CHAN	Channel	—	○	○	○	○
FUNC	Secondary Function	—	—	○	○	○
PROJ	Projector Select	○	—	○	○*	○*
1	1	○	○	○	○	○
2 ^{ABC}	2	○	○	○	○	○
3 ^{DEF}	3	○	○	○	○	○
4 ^{GHI}	4	○	○	○	○	○
5 ^{JKL}	5	○	○	○	○	○
6 ^{MNO}	6	○	○	○	○	○
7 ^{PQRS}	7	○	○	○	○	○
8 ^{TUV}	8	○	○	○	○	○
9 ^{WXYZ}	9	○	○	○	○	○
0 ¹⁰⁺	0	○	○	○	○	○
▲	Up	○	○	○	○	○
▼	Down	○	○	○	○	○
►	Right	○	○	○	○	○
◄	Left	○	○	○	○	○
ENTER	Enter	○	○	○	○	○

Button	Function	3DLP®	1DLP®	M Series (V2.5.0)	M (V2.4.1) J (V1.1.2)	Pre M/J
MENU	Menu	○	○	○	○	○
BACK	Back/Exit	○	○	○	○	○
FAV	Favorites Menu	—	—	—	—	—
KEYST	Keystone	○	—	○	—	—
HELP	Help	—	○	○	○	○
FOCUS ▲	Focus Increment	○	○	○	○	○
FOCUS ▼	Focus Decrement	○	○	○	○	○
LENS ▲	Lens Offset Up	○	○	○	○	○
LENS ▼	Lens Offset Down	○	○	○	○	○
LENS ►	Lens Offset Right	○	○	○	○	○
LENS ◄	Lens Offset Left	○	○	○	○	○
ZOOM 	Zoom Larger	○	○	○	○	○
ZOOM 	Zoom Smaller	○	○	○	○	○
TEST PATTERN ▲	Test Pattern Increment	○	○	○	○	○
TEST PATTERN ▼	Test Pattern Decrement	○	—	○	—	—
PIP ON/OFF	PIP/PBP On/Off	—	○	○	○	○
PIP SWAP	PIP/PBP Swap	—	—	○	○	OSD Show/Hide
OSD POSITION	OSD Position	○	—	○	—	—
OSD HIDE	OSD Show/Hide	○	—	○	○	Input 6
☀	Remote Backlight	○	○	○	○	○

Legacy Commands (Pre-Enterprise)

☀ + ON	Power On/Off (Legacy)	○	○	○	○	○
☀ + OFF	Power On/Off (Legacy)	○	○	○	○	○
☀ + SHUTTER OPEN	Shutter Open/Close (Legacy)	○	○	○	○	○
☀ + SHUTTER CLOSE	Shutter Open Close (Legacy)	○	○	○	○	○
☀ + PROJ	Projector Select (Legacy)	○	—	○	○	○

Legend

○

Supported

○*

Supported when ☀ key is held during press. See Legacy Commands

—

Not Supported

Alt Function

Alternate function executed by button

...

Remote buttons marked with ... typically require a long press to activate

Troubleshooting

If the remote does not function:

Check that the lock switch on the bottom of the remote is in the unlocked position. When locked, this switch prevents battery drain.

If the PROJ key backlight and remote activity light are blue:


Press PROJ-PROJ so the lights return to white. A blue light means the remote is addressed to speak to a specifically-addressed projector, a function which is handled differently in TruLife, TruLife+ and legacy projectors, and will cause the remote not to work with legacy projectors.

Wired Operation

The Enterprise remote may be used wired with legacy projectors. However the pinouts have changed so plugging in a cable adapter does not work. Users of legacy projectors must construct a rewired adapter connecting the remote pins to the appropriate connections on the projector.

For reference, the remote pinout diagram appears on the inside of the remote battery door.

XLR Pinout

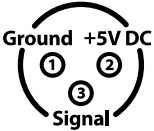

Enterprise Remote

